

Tensorgrip®



LP61

PLATINUM WEB SPRAY
CONTACT ADHESIVE


TensorGrip® LP61 is suitable for bonding HPL, veneers and almost all other decorative face laminates to a variety of substrates including MDF, chipboard, plywood and many other timber sheet materials. This unique formulation is designed for permanent and LIFETIME GUARANTEED bonding of materials where high grab and superior bond strength are required.

ADVANTAGES

- CLASS-0 Fire Rating.
- Easy application control.
- High Temp Resistance - 128°C.
- Minimal Cleaning.

TECH DATA

SQUARE METRE COVERAGE (m²):

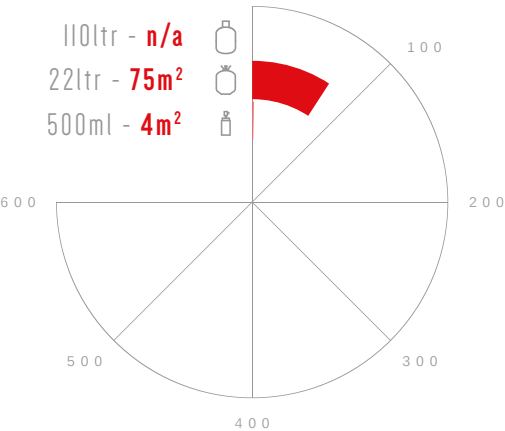

APPLICATION:



2 sided

FLASH-OFF*:



1-3 mins

OPEN TIME*:



Up to 40 mins

COLOUR:



Orange

SUITABLE FOR:



Aluminium
Sheeting



Synthetic
Leather



Standard
Laminate



FRL



Plastic

PROPERTIES:



Web Spray



Class-0
Fire Rated

*depending on ambient temperature

CHEMICAL TECHNICAL DATA

Viscosity	350 cps 25°C sp#2, 30r.p.m.
Total Solids	29%-31%
Colour	Orange
System Flammability	Non-flammable adhesive in flammable propellant
Shear	> 250 p.s.i.
Tensile (180° Peel)	> 25 p.s.i.
90° Peel (6.25 sq.cm)	> 25 p.s.i.
Shear adhesion failure temp. (SAFT) 100gram	> 128°C
Heat resistance (25mm/100gram)	115°C
Flash-off time	1-3 mins
Open time	Up to 40 mins
SHELF LIFE	18 months from date of manufacture

CANISTER STORAGE/CHANGE OVER


Turn valve on canister into the off position, spray out remaining adhesive left in the hose, disconnect the spray hose and gun from the canister. Reconnect the spray hose to a canister of cleaning solvent (sold separately) and spray out until liquid is clear which indicates that the hose and gun is clean. If you choose to leave the hose and spray gun on the canister, leave the valve on the canister open. Do not disconnect the hose/gun from the canister. Close and lock the spray gun.

HANDLING & STORAGE


- Consult Material Safety Data Sheet prior to use.
- DO NOT store at temperatures over 50°C.
- Avoid exposure to direct sunlight.
- DO NOT store directly on concrete floor.
- For optimum performance, store at 18°C during use, but must always be above 10°C.
- When connected, keep valve open and hose pressurised at all times.
- DO NOT close valve until ready to connect to new cylinder.
- Release pressure in hose before disconnection.
- Always test product to determine suitability for your particular application prior to use in production.

DIRECTIONS FOR USE


- This product is designed to be applied to one side of the surfaces to be bonded together, However, It can be used for double sided bonding where required. Make sure that surfaces are clean, dry and free from dirt, dust, oil, loose paint, wax or grease, etc. For best results, the temperature of the adhesive and the surfaces being bonded should be between 60 degrees F - 80 degrees F (16degrees C - 27 degrees C).
- Use with adequate ventilation. When possible we recommend shaking the canister well before using. Attach and secure hose tightly onto the spray gun with required tip. Attach the other end of the hose onto the canister. Make sure the hose-valve connections are securely tight. Open the valve on the canister slowly and fully, check for leaks during this process. Unlock the trigger on the spray gun to start spraying.
- Prior to use, check compatibility by spraying a small test patch of the adhesive on the substrate. This product may degrade some substrates.




1. Make sure that surfaces are clean, dry and free from dirt, dust, oil, loose paint, wax or grease, etc.




2. Spray about 10-20 cm (4" – 8") away at a 90 degree angle to the surface, applying a uniform, even coat of adhesive to obtain 80% to 100% coverage of the surface. If necessary, spray another coat of adhesive in areas that appear to need more adhesive.



3. Spray both surfaces to be bonded, one surface vertically and the other surface horizontally.




4. Allow 2 - 3 minutes for the adhesive to tack off until no adhesive transfers to the knuckle when touched.




5. Adhere surfaces and press together with adequate pressure. A roller is recommended to apply a uniform pressure to achieve maximum strength. Allow 24 hours for the adhesive to fully cure.

6. If the spray tip clogs, unscrew the spray tip from the gun and clean with solvent such as lacquer thinner or acetone. Do not use a pin on the spray tip orifice.


COVERAGE



COVERAGE TOO LIGHT



COVERAGE TOO HEAVY



CORRECT APPLICATION =
20 dry gms/sqm